



错误代码/error code	描述/describe	检修处理/Maintenance and treatment
4	短路故障/short trouble	检查是否接线或安装有短路或更换控制器排除故障Check if a short circuit is wired or installed, Or replace the controller to troubleshoot
6	5V电压过低/voltage low	检查仪表线是否阻值过大/Check if the resistance of the instrument line is too high
9	副电机通讯失败 (非双驱车型忽略) /Secondary motor communication failed, (non-two-wheel drive ignored)	检查副控制器与主控制器的连接线Check the connection between the secondary controller and the primary controller
10	仪表板通讯失败/Instrument panel communication failed	检查仪表板与控制器总成线连接线路是否正常 关机, 总成线接口重新拔插后重启车子, 故障仍未消失, 需更换仪表或控制器排除故障Check the connection between the instrument panel and the Controller Assembly line is normal. Shut down the machine and restart the car after the connection of the assembly line is re-plugged
11/12/13	电机电流传感器异常/Motor current sensor is abnormal	检查控制器或电机相线部分线路Check the line of the phase line of the controller or motor .
14	油门霍尔异常/Throttle Hall anomaly	检查油门器是否复零位 油门线及油门器是否正常 可拔掉油门器接线然后重启车子排除问题Check if the throttle is zero, the throttle line and the throttle are normal, Unplug the throttle cord and restart the car to troubleshoot the problem
15	刹车霍尔异常/Brake Hall anomaly	检查刹车把是否复零位 刹车线及刹车把是否正常 可拔掉电子刹车接线然后重启车子排除问题Check whether the brake will be reset to zero position, and the brake line and the brake will be normal, Can unplug the electronic brake wiring and restart the car to eliminate the problem
16/17/18	电机霍尔异常/Motor Hall anomaly	开机出现故障, 需检查电机霍尔接线是否正常 刹车时出现, 需检查更换电机或控制器排除问题BOOT failure, Check that the motor Hall wiring is normal, Brake occurs, need to check the replacement of motor or controller to eliminate the problem
19	副电机霍尔异常 (非双驱车型忽略) /Secondary Motor Hall anomaly, (non-two-wheel drive ignored)	检查副电机霍尔接线是否正常 检查更换电机或控制器排除问题Check that the Secondary motor Hall wiring is normal, Check replacement motor or controller for trouble shooting
21	BMS通讯异常/BMS communication anomaly	BMS通讯异常 (非带通讯电池忽略) /BMS communication exception (non-communication battery is ignored)
50	母线高压/Bus high voltage	主线路电压过高, 开机出现故障, 需检查电池电压是否正常 骑行时出现故障, 需更换电池或控制器排除问题/The main line voltage is too high, BOOT failure, need to check whether the battery voltage is normal, cycling failure, need to replace the battery or controller to remove the problem
53	系统过载/System overload	超出系统负载, 重启车子, 开机出现故障, 需更换控制器排除问题 /Exceed system load, BOOT failure, need to replace the controller to remove the problem.
55	控制器高温报警/Controller high temperature alarm.	控制器温度过高, 静放车子冷却后再重启 开机出现故障, 需更换控制器排除问题 /The temperature of the controller is too high, and the vehicle is restarted after the vehicle is cooled.BOOT failure, need to replace the controller to remove the problem.
58	电池高温报警/Battery high temperature alarm.	电池温度过高, 静放车子冷却后再重启/The temperature of the battery is too high, and the vehicle is restarted after the vehicle is cooled.